


## Top – Down Dispenser Adapter - Spindle

### Adapter Numbers:

- D66003 BT SP-4001 Top - Down Dispenser Adapter (Bobrick)
- D66004 BT SP-4002 Top - Down Dispenser Adapter (ASI)
- D66005 BT SP-4003 Top - Down Dispenser Adapter (Bradley)

### Loading Instructions:

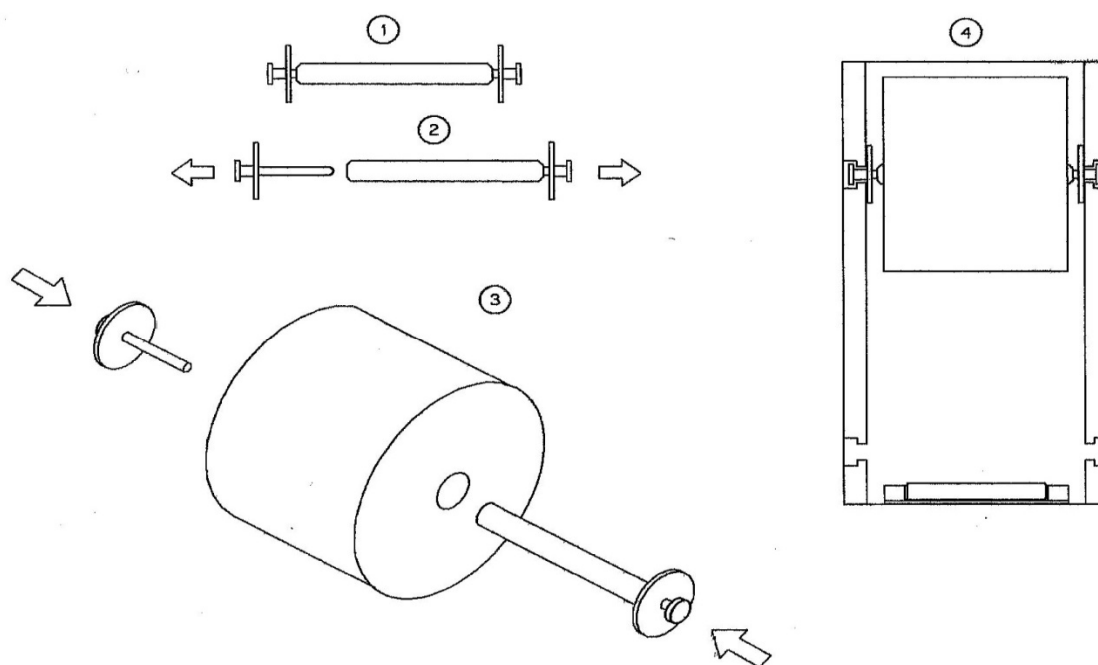

#### Step 1 –

Remove Spindle Assembly  
from package

#### Step 2 –

Remove Spindle End Cap  
from Spindle Assembly

#### Step 3 –

Insert Spindle into one end  
of toilet paper core and the  
End Cap into the opposite  
end of the toilet paper core

#### Step 4 –

Load roll of toilet paper and  
Spindle Assembly into dispenser  
upper track opening